


REMOTE CONTROL INSTRUCTION

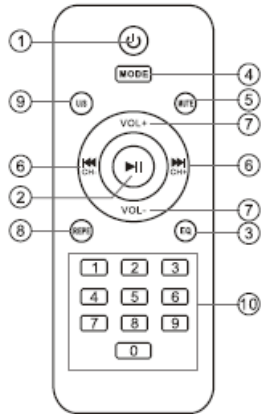

1. **POWER**: Press it to turn on the unit, press it again to turn off.
2. **PLAY/PAUSE**: Press to play, press again to pause.
3. **EQ**: Sound field effect button.
4. **MODE**: Work mode select U / S / FM / AUX.
5. **MUTE**: Press it to mute down sound.
6. **▶▶/◀◀**: Press ▶▶ to skip next track. Press ◀◀ to skip prev. track.
7. **VOL+ / VOL-**: Press it to adjust volume level.
8. **REPEAT**: Switch the repeat mode.
9. **S / U**: Press it to turn S card and U
10. **0-9**: Numeric buttons

SPECIFICATION

Power Output (4 Ω)	60W + 60W
Power Output (8 Ω)	40W + 40W
External devices sensitivity.....	200mv
Signal/Noise ratio (with IHFA Filter)	≥74dB
T.H.D.....	≤0.19% (1KHz/1W/4 Ω)
Frequency band.....	40Hz-20KHz ±2dB
Music/Mic tone adjustment: TREBLE.....	±10dB(10KHz)
Music/Mic tone adjustment: BASS.....	±10dB(100Hz)
Power source.....	220-240V 50Hz

The products improved constantly, when the appearance and parameter changes, subject to samples, without prior notice.



**MICRO COMPONENT SYSTEM
With Karaoke Function.**

BN-302

Operation Manual

PLEASE READ THIS MANUAL BEFORE USING

INTRODUCTION

Thank you for purchasing the power amplifier, To take full advantage of the amplifier functions, and to enjoy long and trouble-free use, please read this user's manual carefully.

IMPORTANT SAFETY INSTRUCTIONS



1. Make sure that line voltage in AC 110V/60Hz
If you are not sure, Kindly consult your appliance dealer or local power service company



2. Please put the unit in a ventilated place. Do not operate in a sealed Box.



3. Protect voltage line
Avoid high pressure and stamp on, do not pull, push excessively.



4. Avoid any objects insert the unit. It may cause short circuit and unit defect



5. Avoid water, dust, and moisture. Do not put Flower vase, and other water container on the top of the unit.



6. Avoid cleaning with volatile solution
Do not spray insecticide. Do not clean with alcohol, painting, gasoline, etc.



7. Avoid covering vents
Block up the vents will make the temperature in the unit become higher and will damage the unit.





8. Avoid opening the cover. Do not open, fix, or touch the inner parts, refer to qualified service personnel for help.

FEATURES

1. Built-in Media player is compatible with lossless mode.
2. Built-in FM radio, with searching channel automatically.
3. Radio, Media play with memory with power off
4. The signal switchover between U, S, RADIO automatically.

FRONT AND REAR PANEL INSTRUCTION

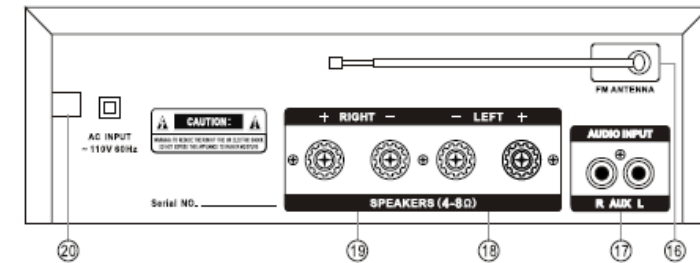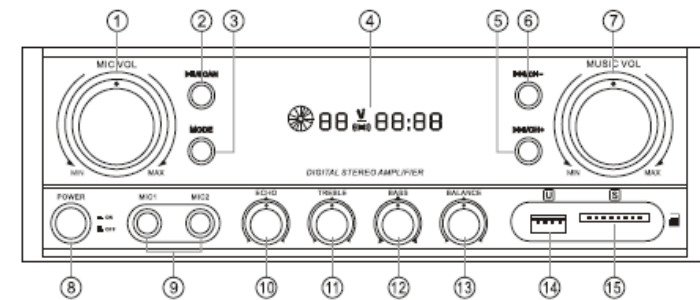

1. Microphone volume adjust
2. Media play/pause or FM scan switch
3. Media work mode select
4. Display screen
5. Media next or FM CH+ switch
6. Media prev or FM CH- switch
7. Music volume adjust
8. Power switch
9. Microphone 1、 2 jack
10. Microphone echo adjust
11. Main channel treble adjust
12. Main channel bass adjust
13. Main channel balance adjust
14. Media U data input interface
15. Media S card data input interface
16. FM radio antenna
17. AUX audio input jack
18. Left channel speaker output
19. Right channel speaker output
20. AC 110V power source input