

DJ-R3.1

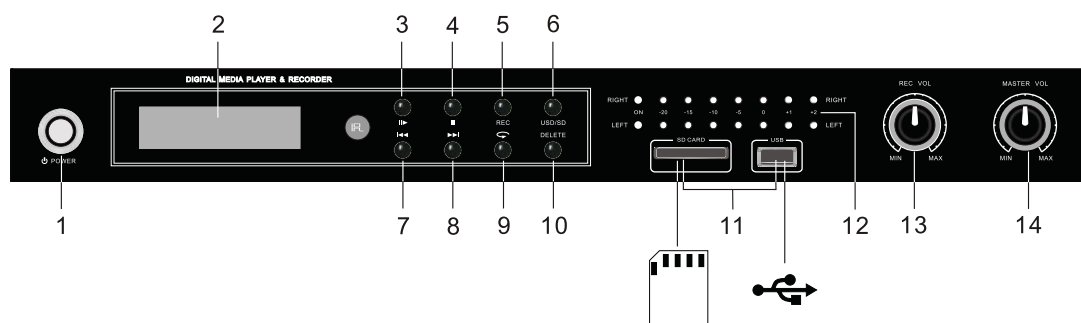 
DIGITAL MEDIA PLAYER & RECORDER



OPERATION MANUAL

OPERATION MANUAL

FUNCTION OF FRONT PANEL



1. POWER ON/OFF SWITCH

Press the button to turn the main unit on or off.

2. LCD DISPLAY SCREEN

To display the working conditions of USB/SD card reader..

3. II ► PLAY/PAUSE

Press the button to enter into play/pause mode. Press STOP button, this function will be cancelled automatically.

4. ■ STOP

In play mode, the set stops playing. In recording mode, the set stops record function and keeps the current recording.

5. REC

Recording button. Press the button to record the selection. When recording, please adjust the music and microphone volume of the connected amplifier and then adjust the REC volume of this unit to get suitable volume for recording.

6. USB/SD

USB/SD Card Select button to transfer USB to SD or SD to USB drive.

7. ◀◀ BACK

The previous selection.

8. ▶▶ NEXT

The next selection.

9. ↻ PLAY-MODE

Press the button, the selection is circulated. Press the button once again the whole folder is circulated. The set is built with original setting function when playing the whole folder is circulated.

OPERATION MANUAL

FUNCTION OF FRONT PANEL

10. DELETE

Delete button. Press the button to delete the current selection in play. Press first time to access standby situation and press once again the selection is deleted.

11. USB/SD CARD

USB/SD card reader port.

****WHEN RECORDING DO NOT INSERT THE USB DRIVER & SD CARD SIMULTANEOUSLY**

12. LED DISPLAY

To display the volume level in stereo mode.

13. REC VOL

Use this control to adjust the recording volume.

14. PLAYBACK VOL

Use this control to adjust the playback volume of the recording.

KARAOKE RECORDING

HOW TO OPERATE THE RECORDING

①—②—③—④ or ①—②—③A—④A—⑤A—⑥A

1. Press "MUSIC INPUT" button of Amplifier to get the music source from DVD or KOD or AUX.
2. Press "REC" button to record the selection.
3. Press lightly "▶ PLAY" button, the recording function stops and the current recording is kept in USB/SD.
4. Press "MUSIC INPUT" button of the connected amplifier to access to the input of RECORDER the current recording is played.
- 3A. Press "■ STOP" the recording function stops and the current recording is kept in USB/SD.
- 4A. Press "MUSIC INPUT" button of the connected Amplifier to access to the input of RECORDER.
- 5A. Press "▶ PLAY" button to access to the play record folder in USB.
- 6A. Press "◀ BACK" button, the current recording will be played.

INDICATOR

1. Play/Pause indicator

In play mode, the indicator flickers. In pause mode, the indicator illuminates steadily. In record mode, the indicator unilluminated.

2. STOP indicator

In stop mode, the indicator illuminates.

3. REC indicator

In record mode, the indicator flickers.

4. ↻ Play mode indicator

The indicator flickers when the selection circulated, the indicator illuminates steadily when the whole folder is circulated.

5. DELETE indicator

Press the delete button to access STANDBY and the indicator illuminates, press once again the selection is deleted and the indicator unilluminated.

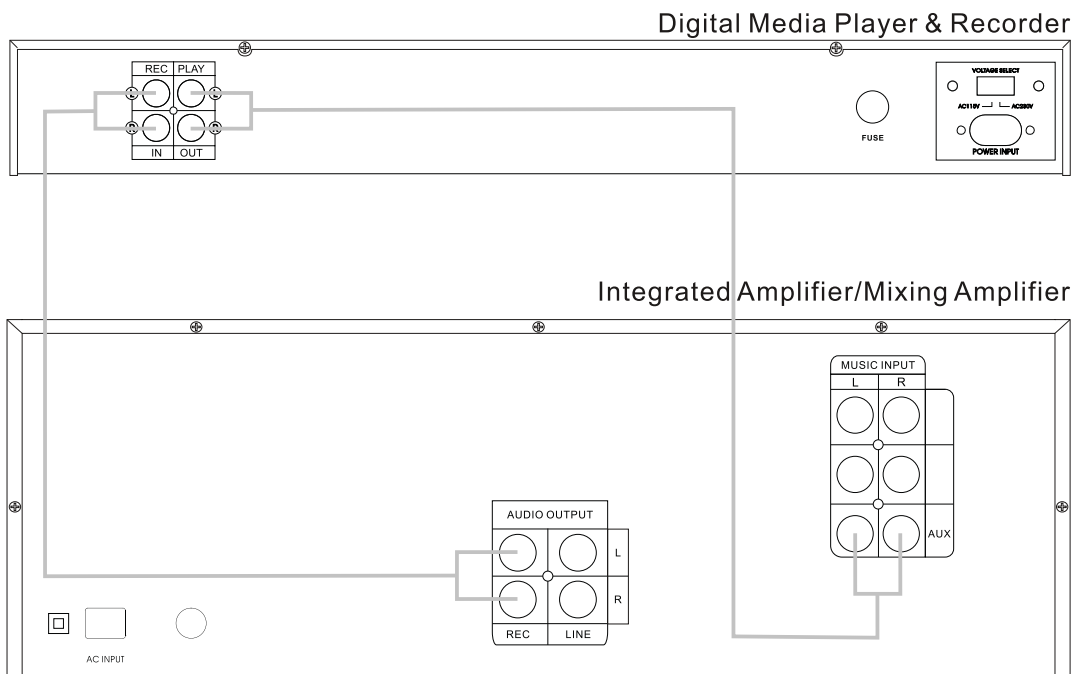 
OPERATION MANUAL

FUNCTION OF REAR PANEL



1. RECORD INPUT TERMINAL
2. PLAY OUTPUT TERMINAL
3. AC POWER FUSE HOLDER
4. AC VOLTAGE SELECTOR
5. AC POWER CORD INPUT


CONNECTING GUIDE



OPERATION MANUAL

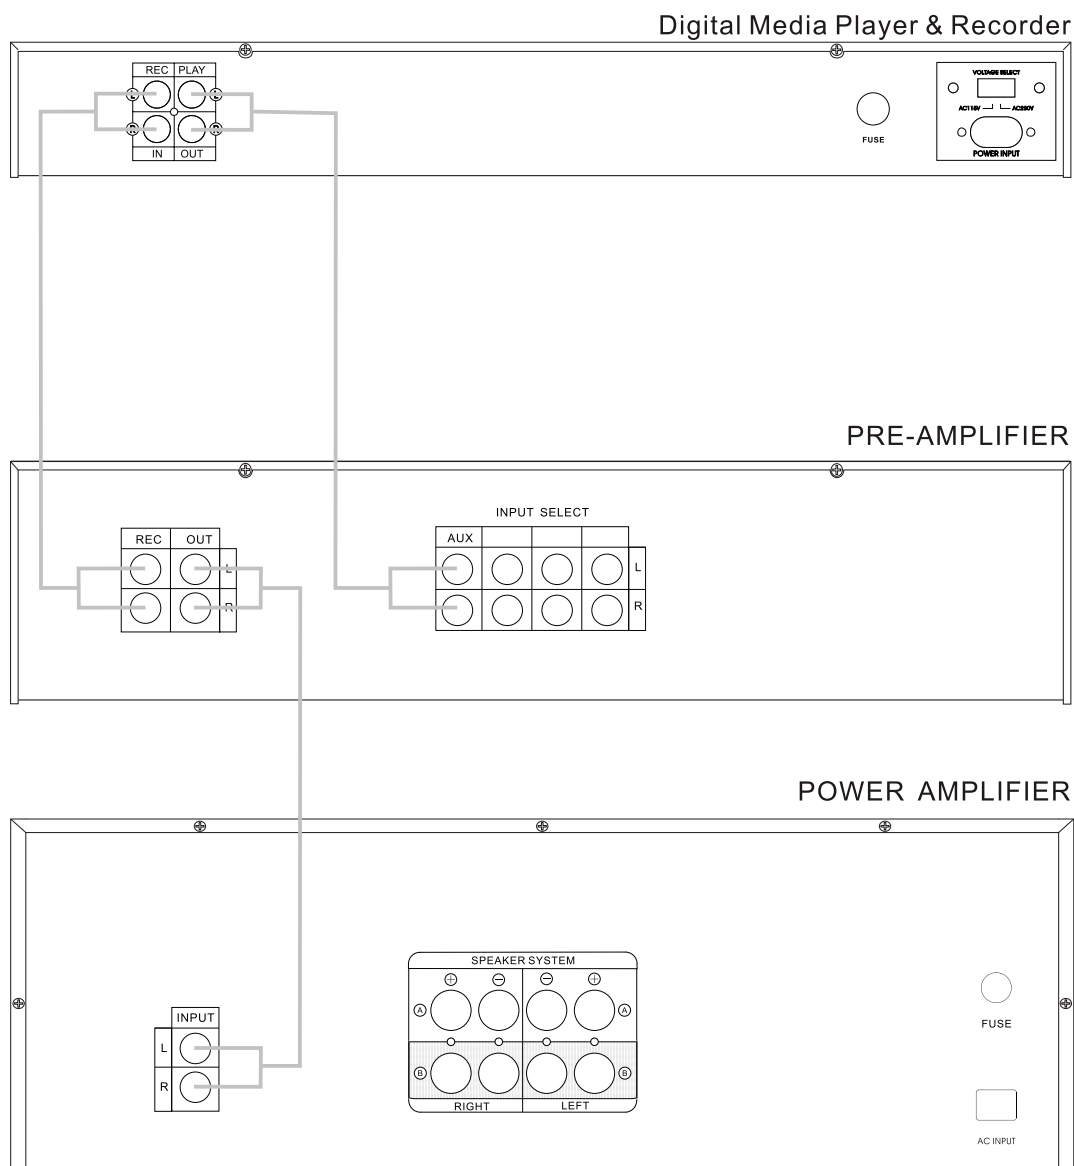 
 
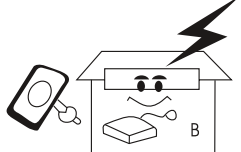 






CONNECTING GUIDE

- Do not power on the unit until all the connections are completed.
- When the pin plug cords are employed, always connect the "White" plug to the left channel and "Red" plug to the right channel. This helps to avoid reversed connections.
- Insert the plugs firmly, poor contact will result no sounds or noise.




OPERATION MANUAL

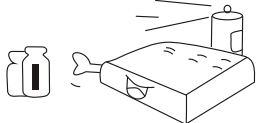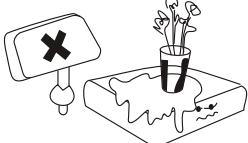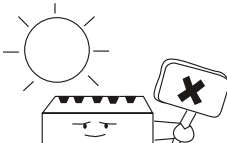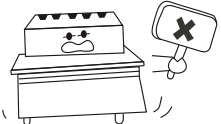    PRECAUTIONS

<p>Be careful when open, otherwise electric shock or serious damage may be made to the product.</p> 	<p>Unplug this product from the wall outlet when not use for a long period of time</p> 	<p>Unplug this product from the wall outlet during lightning</p> 
<p>Objects do not fall into the enclosure.</p> 	<p>Arrange power cords safely. Do not hold the cord when pulling out from the wall outlet. Pull out holding plug.</p> 	<p>This product must not touch chemicals such as benzene, Thinner or alcohol. This may result in discoloration.</p> 
<p>Do not use this product in wet place.</p> 	<p>This product should be installed in well-ventilated and cool place.</p> 	<p>This product should be installed flatty and should not be shaken.</p> 

HOW TO USE THE MICROPHONE PROPERLY

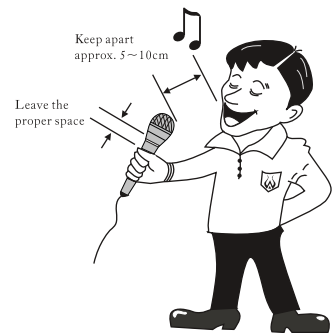 - Keep the microphone apart approx. 5 to 10cm from your mouth.
- To make the clean voice sound, leave the proper space between microphone head and your hold position on microphone.
- Do not cover the lower wind screen of the microphone, which may interrupt the audio sound and may cause howling.





ETIQUETTE OF SOUND



The karaoke performance you enjoy may disturbing others. When performing karaoke, be sure to consider your neighbors. The volume of karaoke is at your command. Remember that even small sound transmits very well in the quiet night, be specially careful in karaoke performance in the night. It is recommended to close the windows to avoid sound leakages to the neighbors, and have considerations for comfortable living environments of others.

OPERATION MANUAL

SAFETY INSTRUCTIONS

	CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN!	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

Explanation of Graphical Symbols



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK.
DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

- 1 Read instructions- All the safety and operating instructions should be read before the unit is operated.
- 2 Retain Instructions - The safety and operating instructions should be retained for future reference.
- 3 Heed Warnings-All warnings on the units and in the operating instructions should be adhered to.
- 4 Follow Instructions - All operations and other instructions should be followed.
- 5 Water and Moisture- The unit should not be used near water- for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
- 6 Carts and Stands - The unit should be used only with a cart or stand that is recommended by the manufacturer.
- 6A A unit and card combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart combination to overturn.
- 7 Grounding or Polarization- Precautions should be taken so that the grounding or polarization is not defeated.
- 8 Ventilation - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, the unit should not be situated on a bed, sofa, rug, or similar surface, that may block the ventilation openings;



- or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 9 Heat- The unit should be situated away from heat sources such as radiators, stoves, or other appliances that produces heat.
 - 10 Power Sources - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit.
 - 11 Power Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit the unit.
 - 12 Cleaning- The unit should be cleaned only as recommended by the manufacturer.
 - 13 Nonuse Periods- The power cord of the unit should be unplugged from the outlet when left unused for a long period of time.
 - 14 Object and liquid Entry- Care should be taken so that objects do not fall into and liquids are not spilled into the inside of the unit.
 - 15 Damage Requiring Service - The unit should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the unit; or
 - C. The unit has been exposed to rain; or
 - D. The unit does not appear to operate normally or exhibits a marked change in performance.
 - E. The unit has been dropped, or the cabinet damaged.
 - 16 Servicing - The user should not attempt to service the unit beyond those means described in the operating instructions. All other servicing should be referred to qualified service personnel.
 - 17 Power Lines - An outdoor antenna should be located away from power lines.

IMPORTANT

please record the serial number of this unit in the space below.

Model:

Serial No.:

The serial number is located on the rear of the unit.

Retain this Owner's Manual in a safe place for future reference.

DIGITAL MEDIA PLAYER & RECORDER