
### REMOTE CONTROL INSTRUCTION

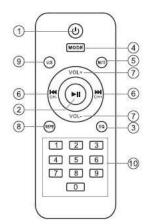

- 1.POWER: Press it to turn on the unit, press it again to turn off.
- 2.PLAY/PAUSE: Press to play, press again to pause. orderly or FM scan.
- 3.EQ: Sound field effect button.
- 4.MODE: Work mode select U/S/FM/AUX/BT.
- 5.MUTE: Press it to mute down sound.
- 6. ⋈/⋈ : Press ⋈ to skip next track.
   Press ⋈ to skip prev. track.
- 7.VOL+/VOL-: Press it to adjust volume level.
- 8.REPEAT: Switch the repeat mode.
- 9.S/U: Press it to turn S card and U.
- 10.0-9: Numeric buttons

#### **SPECIFICATION**

Power Output	250W+250W
External devices sensitivity	200mv
Signal/Noise ratio (with IHFA Filter)	≥74dB
T.H.D≤0.19	% (1KHz/1W/4Ω)
Frequency band4	40Hz-20KHz ±2dB
Music/Mic tone adjustment:TREBLE	±10dB(10KHz)
Music/Mic tone adjustment:BASS	±10dB(100Hz)
Power source.	220-240V 50Hz

The products improved constantly, when the appearance and parameter changes, subject to samples, without prior notice.

\*BT Pairing Name: BT-AMPLIFIER

## MARTIN RANGER®

# Stereo Speaker System MR-600

## **Operation Manual**



PLEASE READ THIS MANUAL BEFORE USING

 
## **INTRODUCTION**

Thank you for purchasing the power amplifier, To take full advantage of the amplifier functions, and to enjoy long and trouble-free use, please read this user's manual carefully.

## **⚠ IMPORTANT SAFETY INSTRUCTIONS**



1. Make sure that line voltage in AC 220-240V/50Hz
If you are not sure, Kindly consult your appliance
dealer or local power service company



2.Please put the unit in a ventilated place. Do not operate in a sealed Box.



3.Protect voltage line
Avoid high pressure and stamp on, do not pull,
push excessively.



4. Avoid any objects insert the unit. It may cause short circuit and unit defect



5. Avoid water, dust, and moisture. Do not put Flower vase, and other water container on the top of the unit.



6. Avoid cleaning with volatile solution Do not spray insecticide. Do not clean with alcohol, painting, gasoline, etc.



7. Avoid covering vents
Block up the vents will make the temperature in
the unit become higher and will damage the unit.





8. Avoid opening the cover. Do not open, fix, or touch the inner parts, refer to qualified service personnel for help.

## **FEATURES**

- 1.Built- in Mp3 player is compatible with lossless mode.
- 2. Built- in FM radio, with searching channel automatically.
- 3.Radio, MP3 play with momery with power off
- 4. The signal switchover between USB, SD, RADIO automatically.

#### FRONT AND REAR PANEL INSTRUCTION

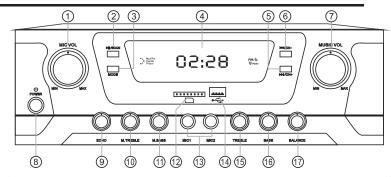

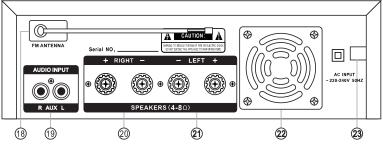

- 1. Microphone volume adjust
- 2.MP3 play/pause or FM scan switch
- 3.MP3 work mode select USB/SD/FM/AUX
- 4. Display screen
- 5.MP3 next or FM CH+ switch
- 6.MP3 prev. or FM CH- switch
- 7. Music volume adjust
- 8. Power switch
- 9. Microphone echo adjust
- 10. Microphone treble adjust
- 11. Microphone bass adjust
- 12.card data input int erface
- 13. Microphone 1, 2 jack
- 14.USB data input interface
- 15. Music treble adjust
- 16.Music bass adjust
- 17. Main channel balance adjust
- 18.FM radio antenna
- 19.AUX audio input jack
- 20. Right channel speaker output
- 21.Left channel speaker output
- 22.Fan window
- 23.AC 220-240V power source input