

### Safety Precautions

- 1: Dont install this unit at the place of excessive heat & moisture, and install at the place of good ventilation.
- 2: Dont install this unit at the place of moisture or dust.
- 3: Make sure that input/output terminals are connected well.
- 4: Make sure to connect PIN PLUG of a connection cord, incomplete connection causes no sound or noise.

### Before Installation

- 1 : The subwoofer can be placed anywhere, we advised that put on the corner house or near the wall, coming out the sound is most optimized.
- 2: The sub. is placed at least 10cm from the walls.
- 3: Keep distance and reduce the volume of sub., too close to other audio equipment may cause noise.

### Specifications

- Driver diameter.....12inch
- Power output RMS.....200W
- Input sensitivity.....600mV
- Sensitivity.....90dB
- Phase settings.....0-180
- Input type.....Line in & high level in
- Power voltage.....220V-240V/50Hz and 110V-115V/60Hz


# 12 " Active Subwoofer

# Operation Manual

We express our heartfelt thanks to the consumers who have purchased our products. please read this operating instruction thoroughly in order to make the best use of many features and controls of this unit, after reading this manual, please keep it well for future use in case of difficulty or trouble.

## Panel Controls

- 1: Low frequency
- 2: Level volume control
- 3: High level output terminals
- 4: High level input terminals
- 5: Line input
- 6: Line output
- 7: Sub.phase
- 8: Switch off/auto/on
- 9: Power indicator
- 10: Power cord

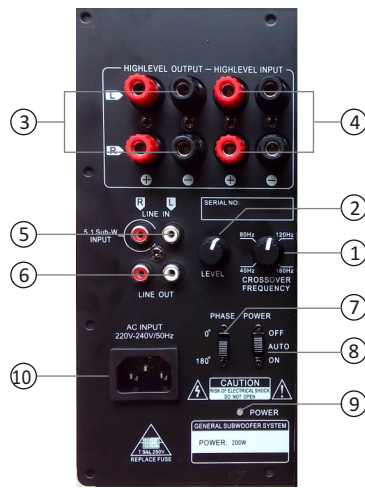


DRAWING 1

## Connections


Before connecting, make sure the units is turn OFF, the units can be selected only 1 (from 2 way below), do not use more than one way at the same time.

## Remarks

- 1: Use the Drawing 2, when VCD/DVD has 2way Audio Out.
- 2: Use the Drawing 3, when amplifier has 2way Speaker Out.

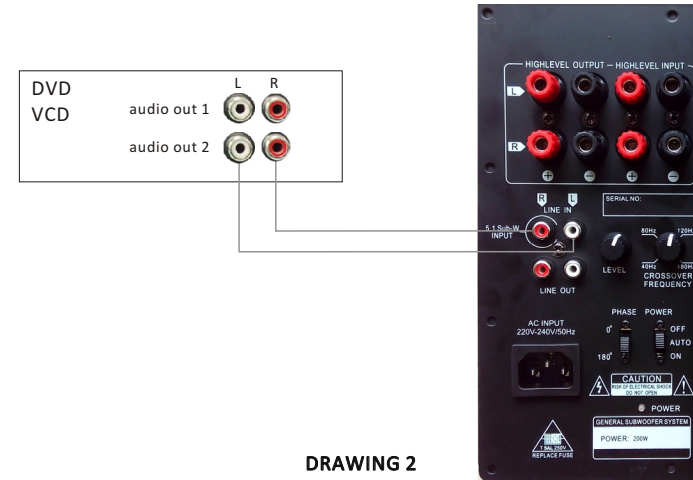

DRAWING 2

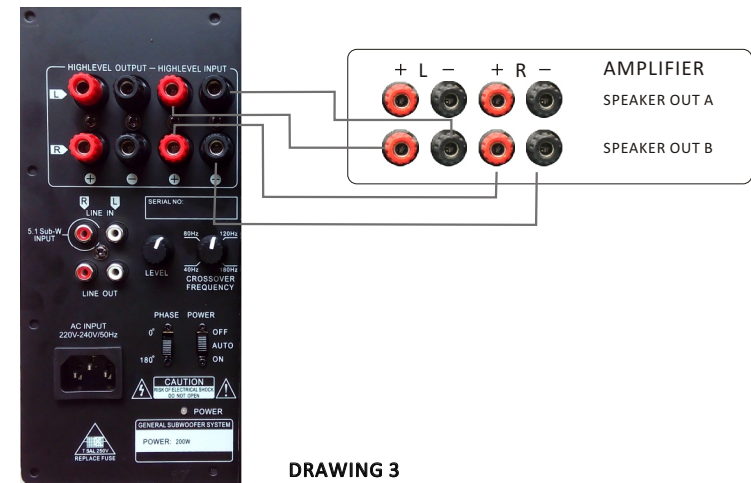

DRAWING 3