 


REMOTE CONTROL INSTRUCTION

Operation Manual

PROFESSIONAL DIGITAL MIXING AMPLIFIER

MR-500

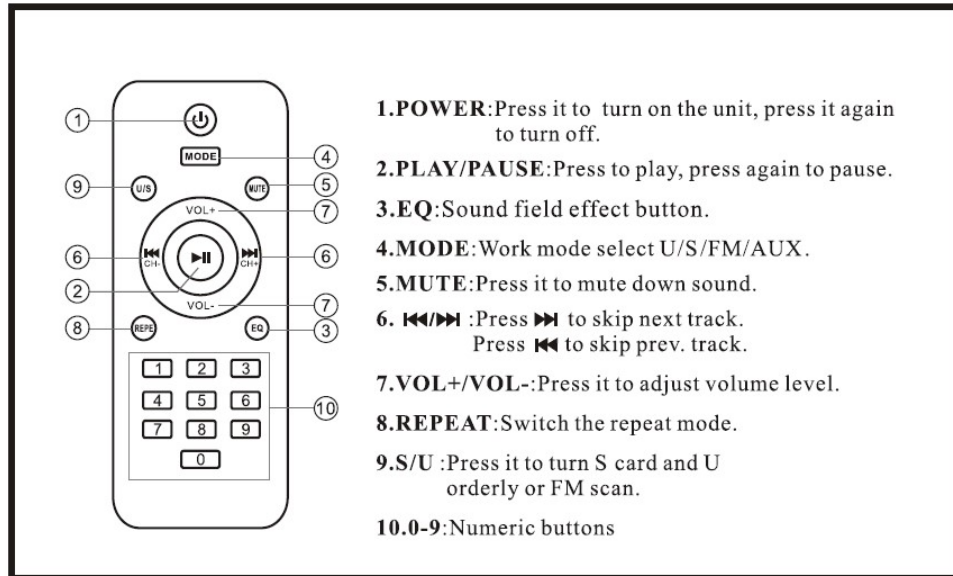

SPECIFICATION

- RMS Power Output 60W + 60W
- External Devices Sensitivity 200mv
- Signal/Noise Ratio (with IHFA Filter) $\geq 74\text{dB}$
- T.H.D $\leq 0.19\%$ (1KHz/1W/4 Ω)
- Frequency Band 40Hz~20KHz $\pm 2\text{dB}$
- Music/Mic Tone Adjustment : TREBLE $\pm 10\text{dB}$ (10KHz)
- Music/Mic Tone Adjustment : BASS $\pm 10\text{dB}$ (10KHz)
- Power Source 110~240ACV 50Hz



Thank you very much for purchasing our digital karaoke mixing amplifier. Please read this manual before using.

www.martinroland.com

INTRODUCTION

Thank you for purchasing the power amplifier, To take full advantage of the amplifier functions, and to enjoy long and trouble-free use, please read this user's manual carefully.

IMPORTANT SAFETY INSTRUCTIONS



1. Make sure that line voltage in AC 110V-240V/50Hz. If you are not sure, kindly consult your appliance dealer or local power service company.



2. Please put the unit in a ventilated place. Do not operate in a sealed box.




3. Protect voltage line. Avoid high pressure and stamp on, do not pull, push excessively.



4. Avoid any objects insert the unit. It may cause short circuit and unit defect.



5. Avoid water, dust, and moisture. Do not put flower vase, and other water container on the top of the unit.

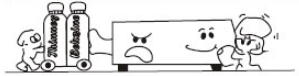

6. Avoid cleaning with volatile solution. Do not spray insecticide. Do not clean with alcohol, painting, gasoline, etc.



7. Avoid covering vents. Block up the vents will make the temperature in the unit become higher and will damage the unit.





8. Avoid opening the cover. Do not open, fix, or touch the inner parts, refer to qualified service personnel for help.

FEATURES

1. Built in Echo Control
2. Support USB/SD/BT/FM
3. DC12V Input
4. Mic Priority

FRONT AND REAR PANEL INSTRUCTION

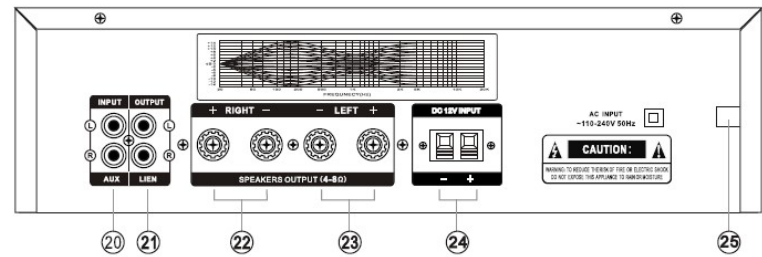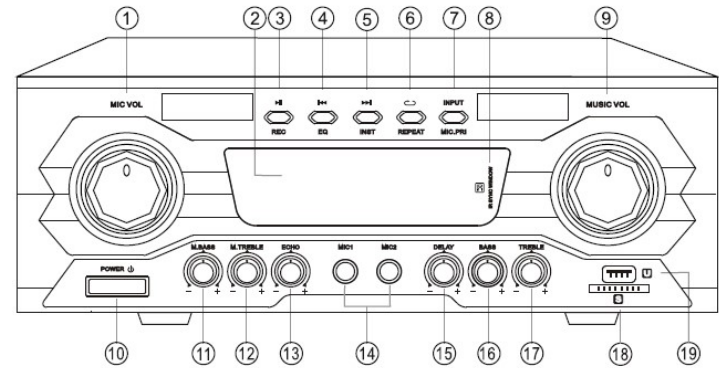

- | | |
|---|------------------------------------|
| 1. Microphone volume adjust | 12. Microphone treble adjust |
| 2. Display screen | 13. Microphone echo adjust |
| 3. MP3、BT mode: Short Press for Pause/Play MP3 mode : Long Press for Record | 14. Microphone 1、2 jack |
| 4. MP3、BT mode: Short Press for Prev、 Long Press for Single EQ | 15. Microphone delay adjust |
| 5. MP3、BT mode: Short Press for Next、 Long Press for INST | 16. Music bass adjust |
| 6. MP3 repeat switch | 17. Music treble adjust |
| 7. Switch Input: U/S、AUX、BT、FM, Long press for Mic Priority | 18. S card data input interface |
| 8. Infrared frequency window | 19. U data input interface |
| 9. Music volume adjust | 20. AUX audio input jack |
| 10. Power switch | 21. Lien audio output jack |
| 11. Microphone bass adjust | 22. Right channel speaker output |
| | 23. Left channel speaker output |
| | 24. DC 12V power source input |
| | 25. AC 110-240V power source input |